

Click to prove
you're human



Walk through our setup tutorial: adding your home entertainment devices, setting up one-touch Activities and learning more about the usage of your remote. Already set up and something's not working? Our troubleshooters and support articles will help set things right. Lets get started. Your Harmony Ultimate One allows you merge the remotes of up to 15 of your home entertainment devices into one so you can, and should! keep those other remotes out of sight. The Harmony software will guide you through entering the manufacturer and model numbers of your home devices so Harmony understands how to control them. It then helps you create Activities (or scenes) so you're only one-button away from watching television or playing a game. Let's get started Harmony Ultimate One remote enables one-touch Activity based control of your home entertainment system. Keep your remote in here when not in use to ensure it's fully charged when you need it. Provides power to the charging station. Your new remote is configured by connecting your Harmony Ultimate One to your laptop or desktop computer using the supplied USB cable, and signing in to the Harmony software. Download and install the Harmony software. If this is your first Harmony remote, create a new account. If you already have a Harmony account then you may sign in and add this new remote to your account. Using the supplied USB cable, connect Harmony Ultimate One to your computer. If this is your first remote then you'll be prompted to enter the manufacturer and model for each of your home entertainment devices. Learn more about finding your device's model number. Are you upgrading an existing Harmony remote? You may also choose to import your previous remote settings. Once all your devices have been entered, the Harmony software will prompt you to create Activities such as Watch TV, Listen to Music or Watch a Movie. You'll be asked what input each of your devices have to be on in order for you to see video and hear sound. Follow the on-screen instructions, or learn more about creating a Harmony Activity. That's it! When you sync, Harmony will transfer these settings to your remote. When you first use your remote control, you will see a tutorial screen. To exit the screen, tap on the X on the right. To never show the tutorial screen again, tap on the box on the top left and then tap on the X on the right. Home > Audio, TV & Photo > Remote Controls > Logitech Remote Controls > Logitech Harmony Ultimate Remote Control Need a manual for your Logitech Harmony Ultimate Remote Control? Below you can view and download the PDF manual for free in English. This product currently has 6 frequently asked questions, 0 comments and has 0 votes. If this is not the manual you want, please contact us. Is your product defective and the manual offers no solution? Go to a Repair Café for free repair services. No preview available, please use the link below to download the manual. Let us know what you think about the Logitech Harmony Ultimate Remote Control by leaving a product rating. Want to share your experiences with this product or ask a question? Please leave a comment at the bottom of the page. Are you satisfied with the Logitech Harmony Ultimate Remote Control? Yes No Be the first to rate this product We understand that it's nice to have a paper manual for your Logitech Harmony Ultimate Remote Control. You can always download the manual from our website and print it yourself. If you would like to have an original manual, we recommend you contact Logitech. They might be able to provide an original manual. Are you looking for the manual of your Logitech Harmony Ultimate Remote Control in a different language? Choose your preferred language on our homepage and search for the model number to see if we have it available. Brand Logitech Model Harmony Ultimate Category Remote Controls File type PDF File size 3.35 MB All manuals for Logitech Remote Controls More manuals of Remote Controls Our support team searches for useful product information and answers to frequently asked questions. If you find an inaccuracy in our frequently asked questions, please let us know by using our contact form. To connect your universal remote control, you need the model number and brand name of both the remote control and the television. There is a list of codes for brands and model numbers in the manual of the remote control . This was helpful (7641) Read more Certain television settings may require you to enter letters. There are usually three letters or other characters on a button. When letter input is required, you can press that button once for the first letter, press twice for the second letter and press 3 times for the third letter. This way, text can be written with a minimum number of buttons. This was helpful (619) Read more Often a remote control of a television will also work on similar models of the same brand. However, it is unusual that it will work on all models of that brand. Universal remote controls are more suited to do this. This was helpful (465) Read more An average infrared remote control had a range of around 3 to 6 meters. Also, the further away the device is, the harder it will be to aim. This was helpful (377) Read more Ja, the device can still be safely used. Firstly, remove the oxidized battery. Never use bare hands to do this. Then clean the battery compartment with a cotton swab dipped in vinegar or lemon juice. Let it dry and insert new batteries. This was helpful (308) Read more Replacable batteries can remain in a device for a long time if the device is in use. When a device is being stored for a long time it is advisable to remove the batteries to prevent oxidation. This was helpful (234) Read more